



Safety/Operating Instruction Sheet

Lifting: *Genie Hoist*

Updated March 2010

Safety Rules

1. Do not overload. Observe the maximum load capacity.
2. Use on a level surface only.
3. No Riders. The Genie Hoist is a material lift only and is not to be used for lifting personnel.
4. Never permit anyone to stand under a load.
5. Do not lean a ladder against the Genie Hoist.
6. Do not move the unit when elevated.
7. Stay clear of overhead wires and obstructions.
8. Centre load against back of forks. Do not have the load centre farther out from the back of the forks than 13". If the load has a greater than 13" load centre, discuss the application with a sales representative.
9. Do not operate the unit from an elevated platform, scaffold, truck bed or extended surface or support.
10. Never leave the Genie Hoist unattended with a load partly raised.
11. Inspect the cable before operating. Do not use the Genie Hoist with a worn, frayed or kinked operational cable.
12. Never lift a load unless there is minimum of three wraps of cable (inoperable cable) around the winch drum when the load starts to lift.
- 13.

Sequence of Operation

Before lifting a load with the Genie Hoist, elevate the mast all the way and check for proper sequence of extension of the mast sections.

- Forks should rise to the top of the mast
- Front mast section fully extends
- Next section fully extends
- All sections fully extended in order

The sequence of operation is reversed when lowering, with the fork assembly coming down last.

Trouble Shooting

If the sequence of operation ever changes, such as improper order of extension or two sections going together, check immediately for abnormal resistance in the system due to the following possible causes:

- Cable has come off pulley
- Faulty pulley bearing
- Pulley is jammed or not turning properly
- Defective roller
- Dirt or foreign particle between mast sections or on rollers
- Damaged carriage or mast section

Do not continue to operate until the problem has been corrected and proper sequence of operation is attained.

Units 53 & 56, Wimbledon Stadium
Business Park, Riverside Road,
London, SW17 0BE.
Tel:020 8946 7902
Fax:020 8946 7001

Unit 4, Buzzard Creek Industrial
Estate, River Road,
Barking, IG11 0EL.
Tel:020 8594 7529
Fax:020 8594 8674

Units 15 & 16, Brocklebank
Industrial Estate, Bugsby's Way,
Charlton, SE7 7SX.
Tel:020 8465 5835
Fax:020 8465 5832

10 Foundry Way, Eaton Socon,
St Neots, Cambs, PE19 8TR.
Tel:01480 217605
Fax:01480 407108
Email : liftingequipment@btconnect.com

Manual Lift for construction and industrial applications

The Genie Superlift Advantage is a package of options you select to design the Superlift you need and want and you get value for money. The models are compact and allows lifting and manoeuvres in congested work areas with ease. Choose-

- Base and mast-either standard with 5 different heights-or Straddle base with 3 different lifting heights.
- Winch-one or two speed
- The load handling attachments you need.

The field-proven design ensures durability and dependability. The welded steel base provides extra support and stabilizers are standard on 20 and 25ft models. There are no loose parts and used for thousands of general and industry purposes.

Standard features

- Patented telescoping mast system.
- Heavy duty design for compactness, safety, strength and rigidity.
- Quick step requires no tools and is ready to work in seconds and easy to load
- Compact design-legs fold up for easy storage.
- In stored position, the roller wheels allow unit to be pushed around.
- Rolls through standard single doorways



Model	SLA 10	SLA 15	SLA 20	SLA 25	Options and Accessories
Height stowed with casters	2.06 M	2.06M	2.06 M	2.06M	<ul style="list-style-type: none"> • Interchangeable load handling attachments handle a large variety of work loads. • A safety brake is optional on all units. • Two-speed winch upgrade (one speed winch is standard-manually operated incorporating a silent ratchet system). • Rear transport wheel assembly. • Non-Marking material for standard or adjustable forks. • Large Casters for 4 ½ in (11cm) of ground clearance (standard base models only).
Length stowed	74cm	74cm	74cm	79cm	
Length operating	1.5 M	1.88M	2.08M	2.08M	
Width-straddle base min	80cm	80cm	-	-	
Load Height-min	15cm	15cm	15cm	15cm	
Load capacity SWL (kg)	454kg	363kg	363kg	295kg	
Weight-standardbase Straddle base	118kg 137kg	144kg 163kg	184kg -	204kg -	
Working Height. With standard or adjustable forks (forks may be inverted to add an optional 51cm of Lifting height.	3.05M	4.57M	6.1M	7.62M	
Boom (transforms Genie into a vertical crane/hoist)	3.3M	4.8M	6.2M	7.4M	
Load Platform (Fits over standard or adjustable forks, no tools required to install or remove.	3M	4.5M	5.9M	7.4M	
Vertical barrel handler (Unloads and stacks drums in vertical position. 114 & 208 litre metal rolling ribs only)	2.7M	4.2M	-	-	