



Safety/Operating Instruction Sheet

Lifting: *Genie Jib Booms*

Updated March 2010

Please note;

When using a GENIE Jib Boom, one must allow for a de-rating factor. Please, before using a jib boom, call our Hire Desk staff and check the Safe Working Load plate on the side of the relevant machine which will show you the maximum load that can be applied at the end of the jib boom. This load can vary, dependent on which particular GENIE Machine you have.

IF IN DOUBT, PLEASE ASK OUR HIRE DESK STAFF

Units 53 & 56, Wimbledon Stadium
Business Park, Riverside Road,
London, SW17 0BE.
Tel:020 8946 7902
Fax:020 8946 7001

Unit 4, Buzzard Creek Industrial
Estate, River Road,
Barking, IG11 0EL.
Tel:020 8594 7529
Fax:020 8594 8674

Units 15 & 16, Brocklebank
Industrial Estate, Bugsby's Way,
Charlton, SE7 7SX.
Tel:020 8465 5835
Fax:020 8465 5832

10 Foundry Way, Eaton Socon,
St Neots, Cambs, PE19 8TR.
Tel:01480 217605
Fax:01480 407108
Email : liftingequipment@btconnect.com